




MiniFlash Pasteurisers for Milk





The images show a "MiniFlash" system (left) and a "MiniFlash Electric" system (right), both with extra equipment.

Our MiniFlash pasteuriser for milk is intended for dairy farms, smaller dairies and cheese producers. MiniFlash systems are semi-automatic. Everything which is hard to sustain manually is automated (e.g. the temperature control). Everything which can easily be observed or decided in passing (alongside other activities) is carried out manually. This is the only way to keep the price for our high quality MiniFlash pasteurisation system down.

Limits of performance


The following process parameters form the limits for our MiniFlash pasteuriser for milk. All systems are built in line with customer requirements.

-> Heating temperature: 60-95°C, adjustable

-> Heat holding time: 15-60 seconds

-> Throughput rate: 100 - 3000 litres/hour


Almost all special requirements can be implemented. If your requirements differ from the values indicated, we would be delighted to implement a special design. A precise value for each parameter must be specified on placement of an order. The system can then be operated within a certain range in line with the values specified. The process parameters (temperature, throughput rate) can be exceeded by 5% and gone below by 50% with a system which was designed for a heating temperature of 75°C, a holding time of 15 seconds and a throughput rate of 1000 litres per hour for example.

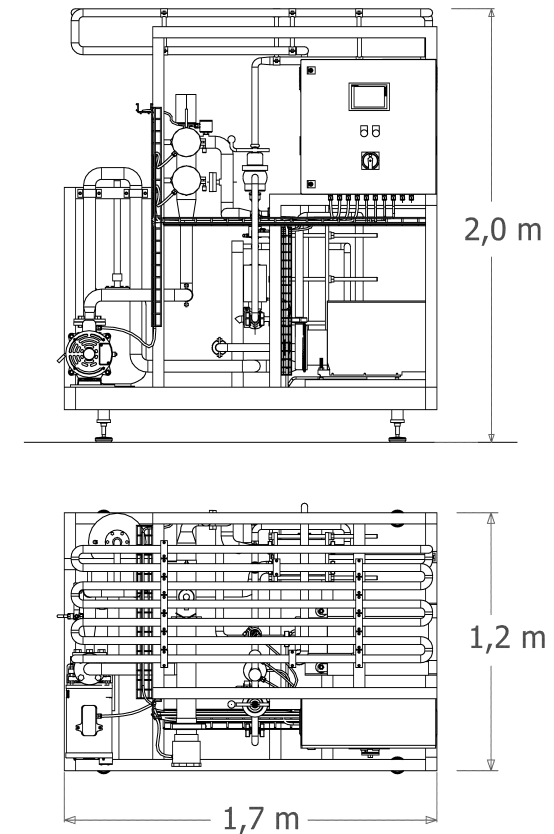


A pasteurisation temperature of 75°C and a heat holding time of 30 seconds are normally applied for milk. As pasteurisation at 95°C is possible with our MiniFlash system, the system is suitable for a wide range of milk products. Products with a viscosity of up to 500 mPas can be processed without any major modifications.

Process description

The heating up of the system is the first stage of the process. A closed water circuit with an equalisation tank is necessary for this. In most cases this water circuit is closed via a circulation tank which is available as an option. If this water circuit has been established, the complete system is heated up by the pasteurisation plant. The system is cooled down from the sterilisation temperature to the pasteurisation conditions following the initial heating up. This step is already carried out with the product or the feed water. The cold product cools the system down to the pasteurisation conditions very quickly. Production stops automatically once the target tank or the buffer tank is full or if the pre-set limits for the pasteurisation units cannot be kept (if the supply of steam is interrupted for example). A warning message is issued. The operator must now decide how to continue. It is possible to connect an empty tank for example and then to continue production immediately. If the downtime lasted for such a long time that the system cooled down too much, the restart must begin with the heating up stage. If a cooling section is included, longer downtimes can also be bypassed by maintaining the pasteurisation parameters with a circulation run.

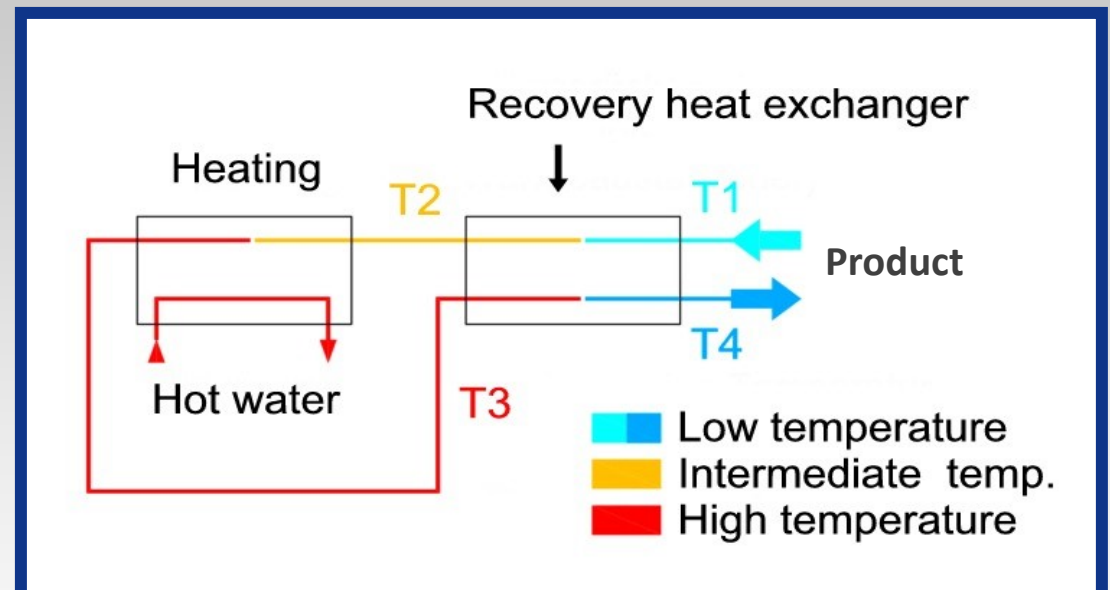

An electrically heated system is also an extremely economical option due to the high internal heat recovery rate of up to 95% (cold aseptic filling only). The internal heat recovery reduces the required steam or electrical output considerably. A heat recovery rate of 90% signifies that only 10% of the energy statistically necessary for heating up to the pasteurisation temperature is actually required. The higher the filling temperature, the lower the amount of energy recovered.

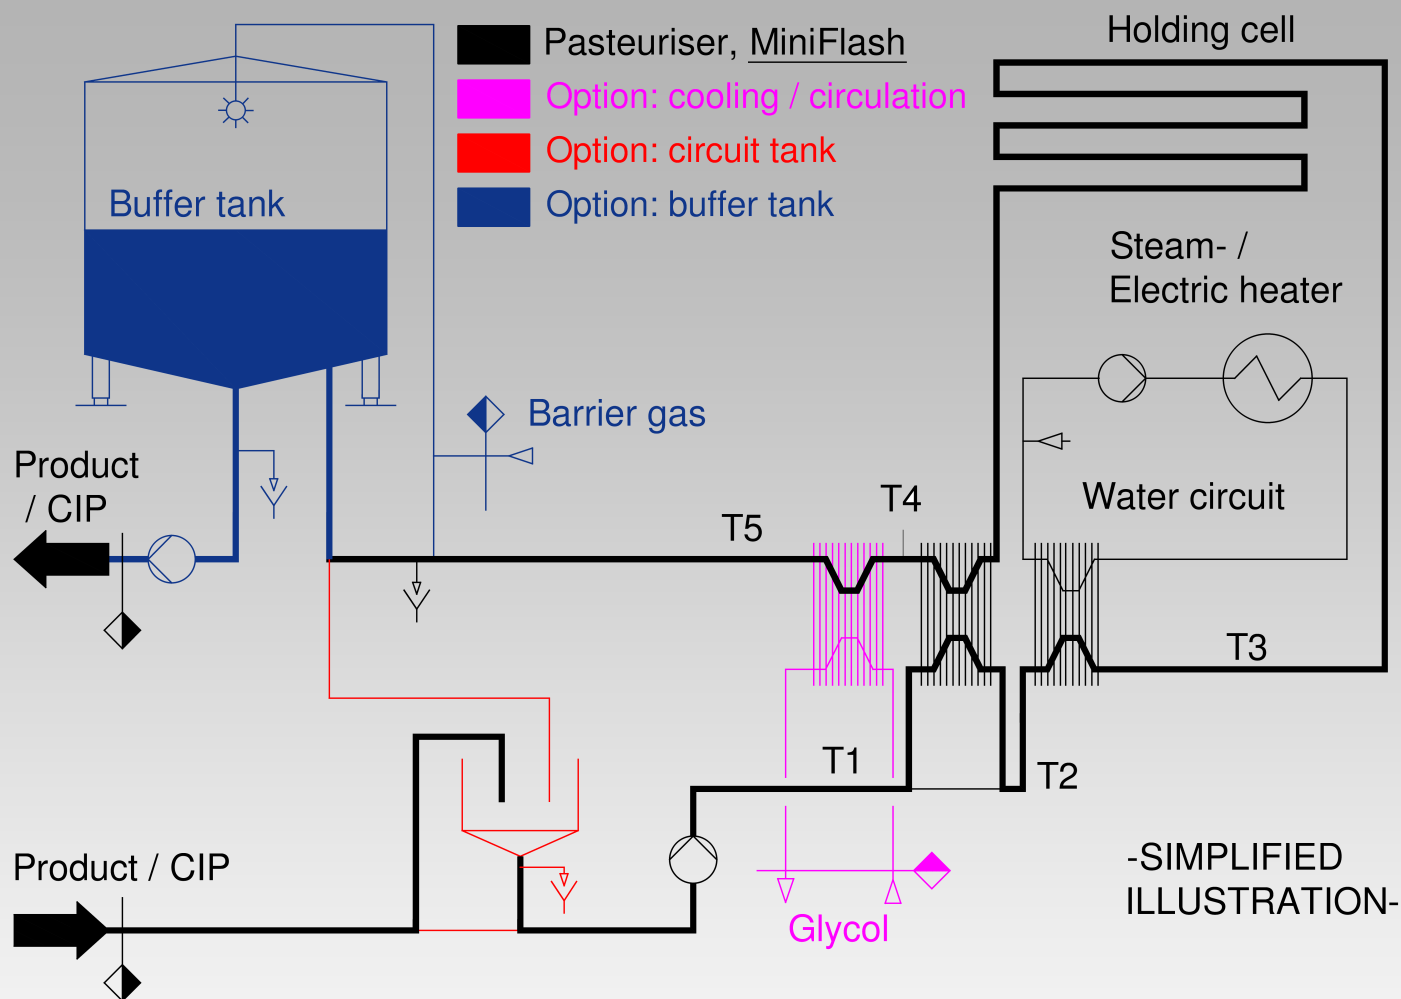

Optional equipment

- > Cooling section
- > Buffer tank incl. routing system
- > Control system on PLC basis (S7)
- > Touchscreen operating interface
- > Process data recorder
- > Pre run vessel
- > CIP, integrated
- > Degassing unit for fruit juice
- > Homogenizer (other make)
- > Separator (other make)

We take care of the complete process. This is the case even if we are only responsible for the pasteurisation system. Customers can rest assured that we leave nothing to chance.

Office address:
Inter-Upgrade GmbH
Bernhard-Ihnen Str. 18
D-21465 Reinbek

Tel./Fax/e-Mail
0049 (0)40 36194755
0049 (0)40 74396809
office@interupgrade.com